




# SAFER SPORTS TECHNOLOGIES

## hook & loop kit installation instructions

1. Each SST head guard comes with a custom hook & loop kit to provide for a secure installation of the guard in your hat. Each kit includes:

(3) 1" x 1.5" Iron-on loop patches  
(1) 3" x .5" Peel and Stick hook strip

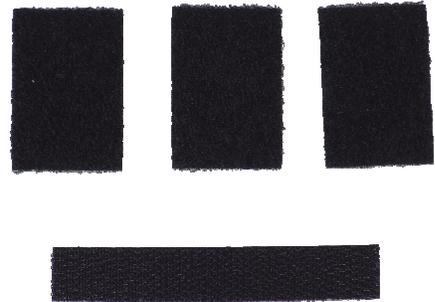

2. Make sure your SST head guard is clean & dry.  
Peel the paper backing off of the 3" x .5" hook Velcro strip.

Carefully place the Velcro strip on the outside of the guard, approximately .25" from the bottom.



3. The loop placement in the hat will vary based on the guard. For Prospect guards, the loop patch will need to be placed more towards the front of the hat as pictured. For Pro X guards, the loop patch will need to be placed further back towards the side of the hat.  
While one loop patch offers enough strength to hold the guard in place, we recommend using at least two to allow for greater adjustment of the guard in the hat.



4.
  - Turn your iron to the highest heat setting and activate the steam option.
  - Make sure your iron-on loop patch is placed where you want it in the hat and that the loop side of the patch is facing the sweat liner.
  - Use a cotton cloth or similar piece of fabric to cover your hat. This will help protect the hat from being damaged by the iron.
  - With the patch in place and the cloth covering the outside of the hat place the iron on top of the cloth. Use firm pressure and move the iron back and forth for 90 seconds.
  - Allow the hat to cool for 5 minutes and then check that the patch is securely attached to the hat.
  - If any part of the patch is not attached to the hat, repeat the process for 30-60 seconds.
  - Your hat is now set up to securely attach your SST head guard.